



PHONE: 780-454-2006  
 FAX: 587.773.4307  
 EMAIL: [sales@martechdss.com](mailto:sales@martechdss.com)  
 WEBSITE: [www.infrascrub.com](http://www.infrascrub.com)

## INFRASCRUB® INSTALLATION GUIDE

### Odor Control Package Contents:

1. 1x OCU Cannister
2. 1x Wall Mounted Manifold Assembly w/ Hose Bib Connections (WMA)
3. 15' Reinforced 2" Clear Hose (1x 5' and 1x 10' Lengths)
4. 4x Hose Clamps 2"
5. 1x ARI D025 Threaded Conversion Fitting to 2" Male Camlock
6. 2x 2" Female Camlock w/ Hose Bib Connection 2"
7. 1x 5 Gallon "Converting Media"
8. 1x 5 Gallon "Oxidizing Media"

### Installation Instructions:

1. Remove existing ARI D025 1 ½" Camlock (threaded) replacing with OCU conversion fitting increasing connection size to 2".
2. Fasten "WMA" to desired location on wall.
3. Measure distance between "Air Valve" and "WMA". Cut appropriate hose length.
4. Insert "Female Camlock Connection Fitting" to one side of hose with hose clamp. (use dish soap or pipe lube for easier insertion of hose bib).
5. Connect to "Air Valve". See 1.1 Illustration.
6. Connect hose to "AIR INTAKE" of manifold. See 1.2 Illustration below.
7. Measure distance between "WMA" and "OCU Canister". Cut appropriate hose length.
8. Insert "Female Camlock Connection Fitting" to one side of hose with hose clamp. (use dish soap or pipe lube for easier insertion of hose bib).
9. Connect to "OCU Canister". See 1.3 Illustration.
10. Connect hose to "AIR INTAKE" of manifold. See 1.2 Illustration below.
11. Fill OCU Canister with "Converting media"
12. Place "Oxidizing Media" directly over "Converting Media"

### Key Notes:

OCU Canister is supplied with SS Air Craft Cables allowing for the option to hang under the manhole lid or place on base of manhole.

Illustration 1.1

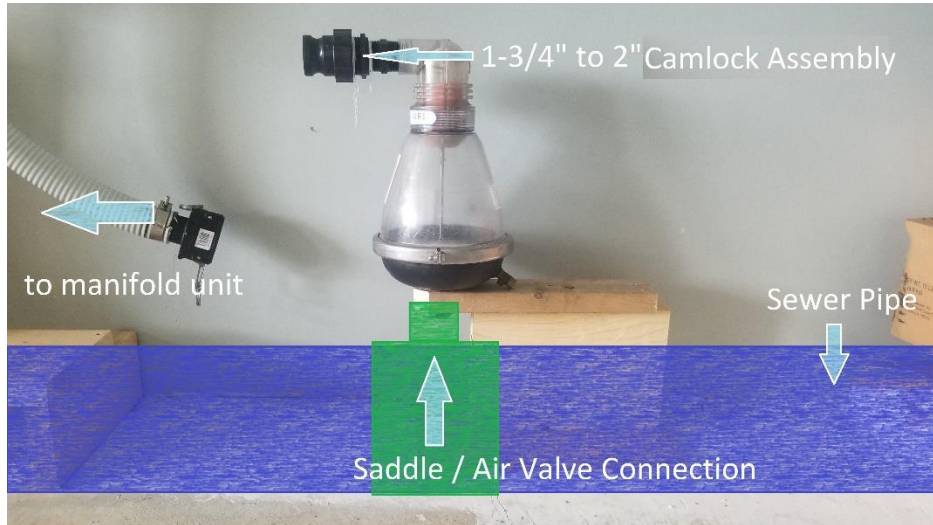


Illustration 1.2



Illustration 1.3

